



emma hayes



Botanic


Non woven paper

A gentle tapestry of shadows and foliage patterns.

Design:	Botanic
Colour:	Shadow
Pattern number:	EH059BS
Description:	100% Non woven paper, pearlescent finish
Grade:	Residential / light commercial
Repeat:	42" half drop
Printed width:	27" / 68.6cm
Roll size:	27" wide x 11 yards long / 68.6cm wide x 10m long
Area:	Covers 74.25ft ² / 6.9m ²
Fire rating:	Class A, ASTM E84 NZ Group 1-S EN BS 13501-1:2002 Class B, s1, d0
Order:	by the roll
Environment:	Our non-woven paper is sourced from sustainable forest sources and printed using water based inks 100% VOC free, no harmful off gassing
Installation:	Butt join



Type II commercial grade and custom colourways are available on request. Please contact us for further information.



Paste the wall

The adhesive should be applied to the surface that the wallcovering is being hung onto, e.g. the wall, and the paper applied dry direct from the roll. Note: The paper can still be pasted and hung in the conventional way if desired.



Butt join

Also known as a butted seam. The wallpaper rolls are finished precisely to have no overlap. Meaning the panels simply butt up to each other for ease of installation.



Spongeable

A finished wallcovering from which dirt and some water-based stains may be cleaned carefully from the front face of the paper with a damp soft cloth or sponge at the time of hanging without causing visible damage, providing it is done whilst the adhesive is still damp. No subsequent washability is claimed or implied.



Half sun

Hang in half sun position. The wallpaper has a minimum rating of 3 when tested in accordance with the EN233 lightfast procedure.



emma hayes

Installation instructions

Please read these instructions carefully before hanging this wallcovering. It is advisable that a professional decorator is used.

BEFORE YOU BEGIN

- Before cutting and hanging this wallcovering, ensure that all rolls have the same batch reference, are in good condition, have no shade variation and that no other faults are present. Please ensure that there are enough rolls to complete the job. Examination before hanging is the buyer's responsibility. No claim can be accepted for hanging incorrect wallcoverings or after wallpapers have been cut and hung showing defects that were apparent at time of hanging. No claim is accepted for consequential loss. If you have any reservations, contact us before hanging at mail@emmahayestextiles.com
- Do not assume that the wallcovering will come off the roll the correct way up.
- Avoid folding or creasing that may create markings on this product.
- There are often irregularities in the natural fibres of this paper. Slight variation between batches and samples may occur. This variation is the natural characteristic of the wallcovering and is not considered a defect.
- Take extra care when papering around electric light switches and power points. Do not allow moisture to drip onto electrical contacts.

PREPARATION

- Walls should be clean, dry and even
- Prepare wall by removing all traces of dirt, old wallpaper, or loose paint. Sand any bumps to prevent imperfections from telegraphing through the material.
- Do not hang wallcoverings on any wall with a history of damp. Fill any cracks and allow to dry before hanging.
- It is important that the walls are of an even and consistent colour. Always apply a single coat of pigmented sealer on new and unpainted walls, followed by a wallcovering primer / sizing, such as Roman R-35. Allow this to fully dry.

HANGING

- This is a 'paste the wall product'
- We recommend a premixed, heavy duty, extra strength clay based adhesive, such as Roman 732 Adhesive.
- Apply paste with a brush to back of wallcovering to ensure even application taking care not to get adhesive on surface. Do not use a pasting machine. Avoid excessive soaking.
- Booking varies with backing and climate. Take into consideration the humidity and temperature of your workspace when hanging all materials
- Paste and hang one strip at a time. Treat your product with extreme care.
- Use soft brush and wooden or padded roller to apply wallcovering to wall. Do not use a metal knife or stiff sweep. Do not overlap, use butt joins.
- To remove air pockets sweep face of goods using a standard vinyl sweep (1" bristles). As each strip is installed, remove excess adhesive from the surface. Avoid squeezing paste out of joints.
- Paste must not come in contact with the printed side of the paper covering otherwise staining may occur. In the event that it does, **carefully wipe any excess paste from the face of the paper immediately with a clean damp sponge before it dries.**
- After hanging 2 or 3 lengths, inspect the results to ensure that there is no shading or other fault.

This information has been supplied in good faith, but without guarantee. Site conditions are beyond our control. It is the responsibility of the buyer to ensure that the environment is suitable for the wallcovering.

If you would like any further information, please contact us.

We love to see where our wallpapers are installed. Send a pic to install@emmahayestextiles.com or share [@emmahayestextiles](https://www.instagram.com/emmahayestextiles)




emma hayes

Example of half drop repeat

width 27"
(68.6cm)

Height 42"
(106.6cm)

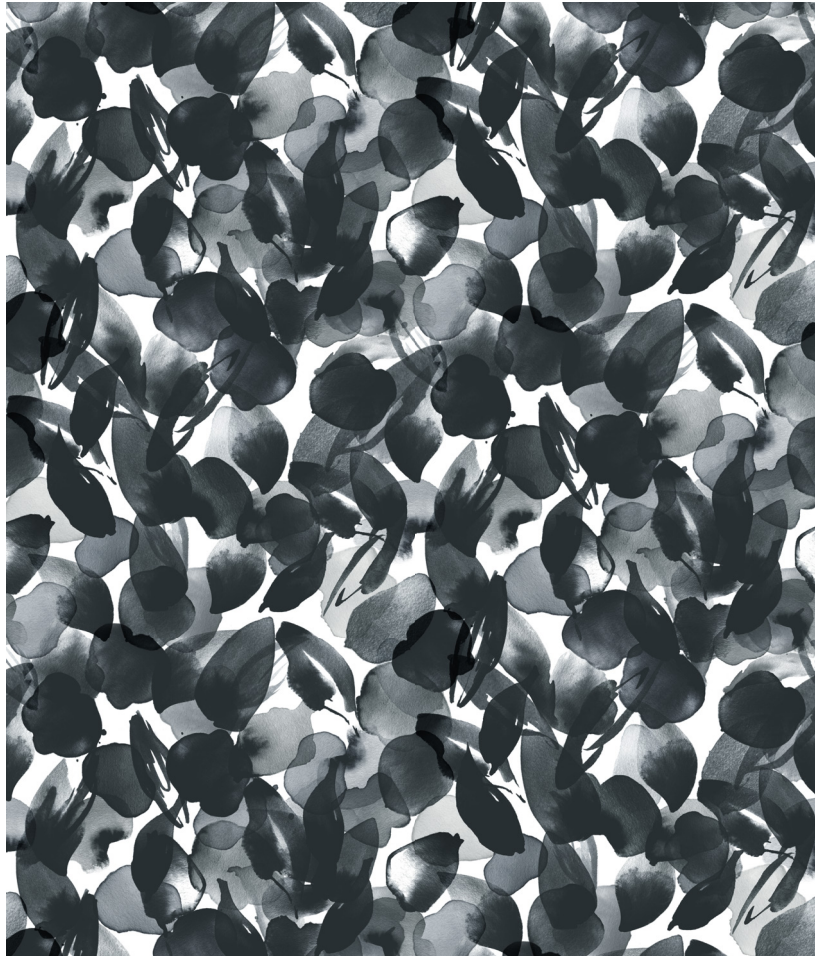

Height 42"
(106.6cm)