

NEWWALL

STILLFORM | GRAIN

# Light Shadow

RESIDENTIAL TEAR SHEET



# Stillform

With its bold central current and softly layered textures, *Stillform* captures a moment of suspended motion—where natural energy meets contemplative stillness. Sculptural and serene, it evokes the quiet power of land shaped by water, offering a grounded yet atmospheric presence in any space.






RESIDENTIAL

# Stillform

Grain

DESIGN NAME	DIMENSIONS	ORIGIN	WASHABLE	SUSTAINABILITY
Stillform	39.4"x 132"	Made in Europe	Yes	FSC® Certified
COLOR	SUBSTRATE	WEIGHT	EASY TO REMOVE	GREENGUARD Gold
Grain	Non-woven	4.4 OZ/Yd2	Yes	OEKO-TEX® Standard 100
GRADE	FINISH	THICKNESS	PASTE THE WALL	
Residential	Matte	0.014"	Yes	
FORMAT	LEAD-TIME	TESTING	INSTALLATION TYPE	
Panel	2-4 Weeks	ASTME-84	Straight - No overlapping	

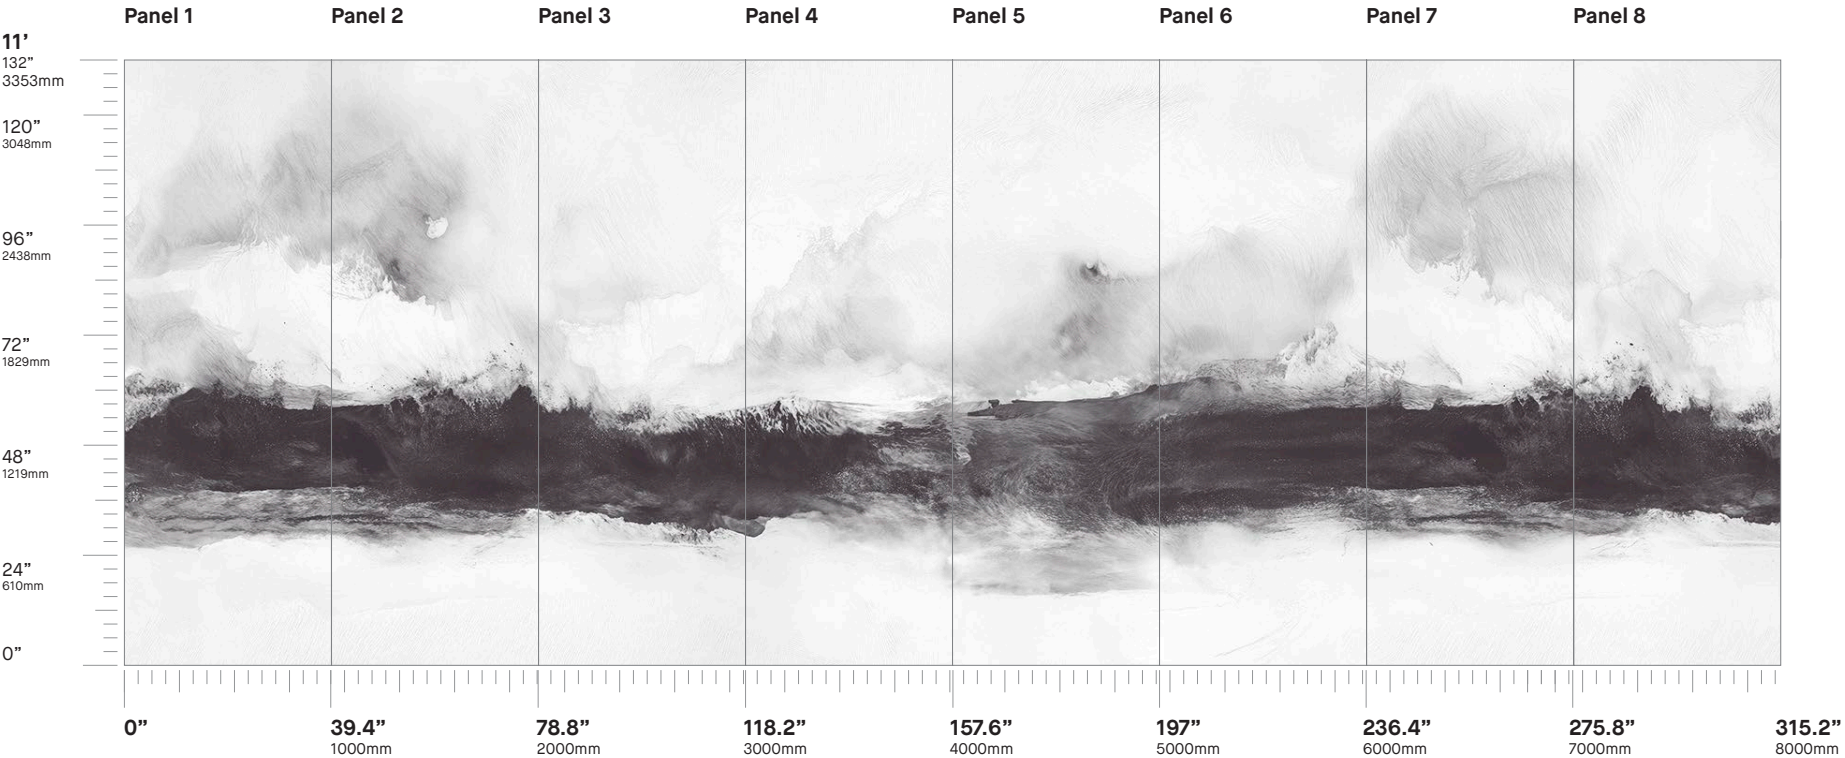

# Installation Instructions

Light Shadow x NewWall Collection

## PANEL SIZE

39.4" W x 132" H  
(100 cm x 335 cm)

## MATERIAL

Non-woven

## GRADE

Residential

## BEFORE YOU BEGIN

Please inspect your order carefully upon delivery. Confirm that:

- All panels are included and in perfect condition
- Panel numbers are clearly marked and follow the correct sequence
- The design aligns properly when laid out in order

NewWall is not responsible for issues that arise once installation has begun. If in doubt, pause installation and contact us.

## WALL PREPARATION

For best results, ensure the surface is:

- Smooth, clean, dry, and free of dust, debris, or loose paint
- Uniform in color (prime if needed to prevent color variation behind light murals)
- Stripped of all previous wallcoverings

## TOOLS REQUIRED

- Clean bucket & sponge
- Non-woven wallpaper adhesive (apply to wall only)
- Smoothing tool or soft wallpaper spatula
- Sharp utility knife or cutter
- Level or plumb line
- Measuring tape and straightedge
- Soft cloth or sponge for cleaning adhesive residue

## HANGING THE PANELS

### 1. Unroll & Trim

Lay out each panel in order (left to right), trimming at the base of each panel where marked. Do not discard the panel number.

### 2. Dry Layout

Lay all panels flat in front of the wall to confirm the mural is complete and the design flows seamlessly.

### 3. Apply Adhesive to Wall

Using a brush or roller, apply the adhesive directly to the wall surface—covering slightly beyond the panel width.

### 4. Install Panels

Starting from the left, apply each panel top-to-bottom. Use a smoothing tool to gently press the wallpaper to the wall, removing air bubbles as you go. Do not overlap seams.

### 5. Clean & Finish

Immediately wipe away excess adhesive with a soft damp cloth. Trim excess material at the top and bottom using a sharp knife and straightedge.

---

## NOTES

- This mural is a dry-hang product. Never apply adhesive to the back of the panels.
- Avoid pulling or stretching panels during installation.
- Install in a clean, temperature-controlled environment (ideally 18–25°C or 65–77°F).