

NEWWALL

SUNWASH | WHISPER

Light Shadow

RESIDENTIAL TEAR SHEET




Sunwash

Softly layered and radiant, *Sunwash* captures the quiet warmth of light in motion. Its gentle textures and tonal depth create a serene, luminous backdrop for any space.



MELODY

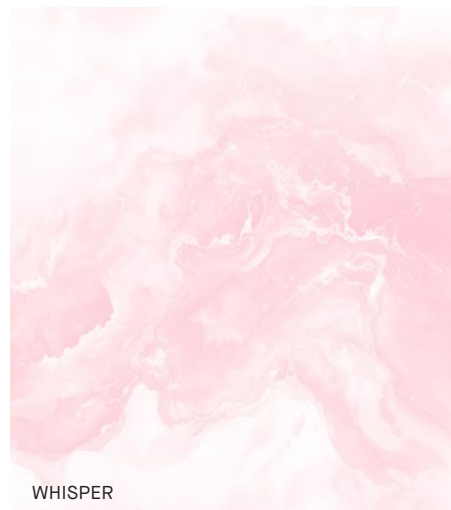

WHISPER



LOAM




HALO



SHEEN



SKYLINE

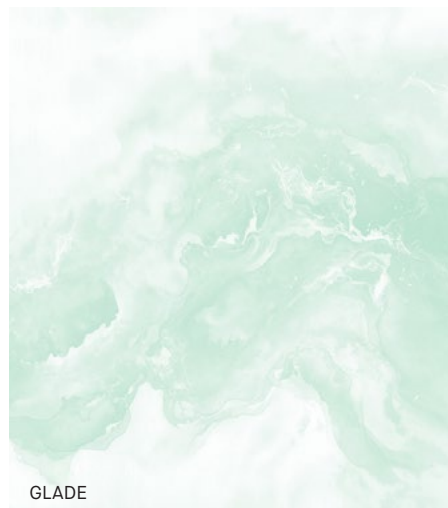


GLADE

RESIDENTIAL

Sunwash

Whisper

DESIGN NAME Sunwash	DIMENSIONS 39.4"x 132"	ORIGIN Made in Europe	WASHABLE Yes	SUSTAINABILITY FSC® Certified
COLOR Whisper	SUBSTRATE Non-woven	WEIGHT 4.4 OZ/Yd2	EASY TO REMOVE Yes	GREENGUARD Gold OEKO-TEX® Standard 100
GRADE Residential	FINISH Matte	THICKNESS 0.014"	PASTE THE WALL Yes	
FORMAT Panel	LEAD-TIME 2-4 Weeks	TESTING ASTME-84	INSTALLATION TYPE Straight - No overlapping	

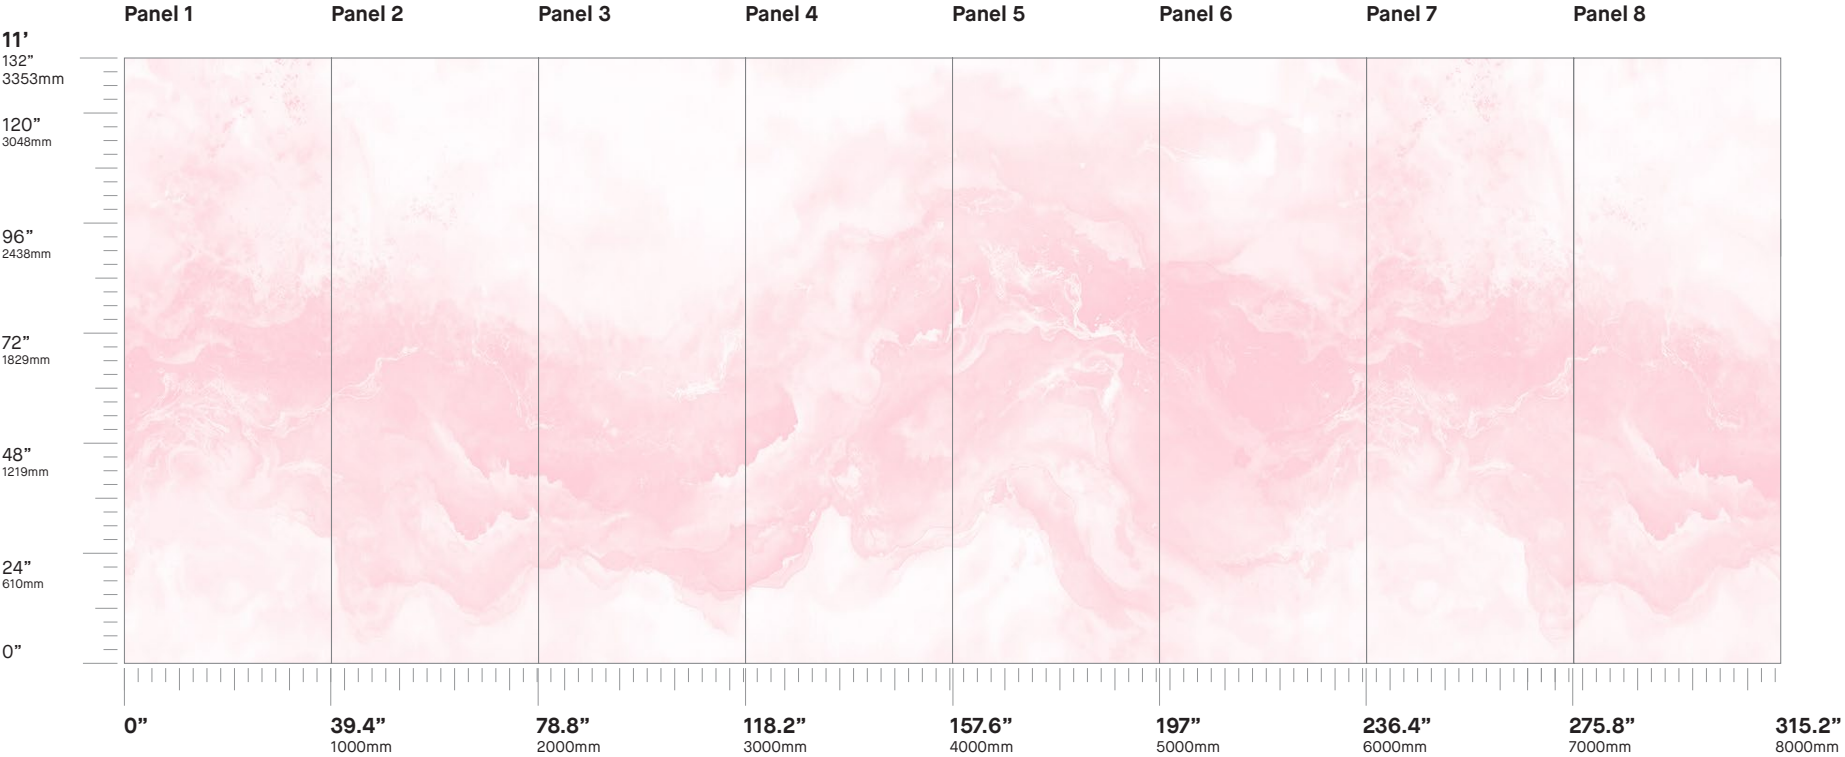

Installation Instructions

Light Shadow x NewWall Collection

PANEL SIZE

39.4" W x 132" H
(100 cm x 335 cm)

MATERIAL

Non-woven

GRADE

Residential

BEFORE YOU BEGIN

Please inspect your order carefully upon delivery. Confirm that:

- All panels are included and in perfect condition
- Panel numbers are clearly marked and follow the correct sequence
- The design aligns properly when laid out in order

NewWall is not responsible for issues that arise once installation has begun. If in doubt, pause installation and contact us.

WALL PREPARATION

For best results, ensure the surface is:

- Smooth, clean, dry, and free of dust, debris, or loose paint
- Uniform in color (prime if needed to prevent color variation behind light murals)
- Stripped of all previous wallcoverings

TOOLS REQUIRED

- Clean bucket & sponge
- Non-woven wallpaper adhesive (apply to wall only)
- Smoothing tool or soft wallpaper spatula
- Sharp utility knife or cutter
- Level or plumb line
- Measuring tape and straightedge
- Soft cloth or sponge for cleaning adhesive residue

HANGING THE PANELS

1. Unroll & Trim

Lay out each panel in order (left to right), trimming at the base of each panel where marked. Do not discard the panel number.

2. Dry Layout

Lay all panels flat in front of the wall to confirm the mural is complete and the design flows seamlessly.

3. Apply Adhesive to Wall

Using a brush or roller, apply the adhesive directly to the wall surface—covering slightly beyond the panel width.

4. Install Panels

Starting from the left, apply each panel top-to-bottom. Use a smoothing tool to gently press the wallpaper to the wall, removing air bubbles as you go. Do not overlap seams.

5. Clean & Finish

Immediately wipe away excess adhesive with a soft damp cloth. Trim excess material at the top and bottom using a sharp knife and straightedge.

NOTES

- This mural is a dry-hang product. Never apply adhesive to the back of the panels.
- Avoid pulling or stretching panels during installation.
- Install in a clean, temperature-controlled environment (ideally 18–25°C or 65–77°F).